



LEDWASH 7X40



DMX SHEET



LEDWASH

7X40

Channel		Function	Description	Value
17 Ch	22 Ch			
1	1	Pan	Pan Adjustment	0 - 255
2	2	Pan Fine	Pan Adjustment Fine	0 - 255
3	3	Tilt	Tilt Adjustment	0 - 255
4	4	Tilt Fine	Tilt Adjustment Fine	0 - 255
5	5	Pan / Tilt Speed	From fast to slow	0 - 255
9	6	Zoom	From narrow to wide	0 - 255
7	7	Dimmer	From 0 to 100 %	0 - 255
8	8	Dimmer Fine	Dimmer adjustment control	0 - 255
6	9	Strobe	No Function	0 - 3
			Strobe speed slow to fast (1HZ-25HZ)	4 - 203
			Random strobe	204 - 255
10	10	Red	From 0 to 100%	0 - 255
	11	Red Fine	Red fine Adjustment	0 - 255
11	12	Green	From 0 to 100%	0 - 255
	13	Green Fine	Green fine Adjustment	0 - 255
12	14	Blue	From 0 to 100%	0 - 255
	15	Blue Fine	Blue fine Adjustment	0 - 255
13	16	White	From 0 to 100%	0 - 255
	17	White Fine	White fine Adjustment	0 - 255
	18	Dimmer Mode	Mode 1	0 - 49
			Mode 2	50 - 99
			Mode 3	100 - 149
			Mode 4	150 - 255





LEDWASH 7X40

Channel		Function	Description	Value
17 Ch	22 Ch			
14	19	Static Color	No Function	0 - 15
			Red	16 - 35
			Yellow	36 - 55
			Green	56 - 75
			Cyan	76 - 95
			Blue	96 - 115
			Magenta	116 - 135
				136 - 155
				156 - 175
			2800 K	176 - 195
			3200 K	196 - 200
			4000 K	201 - 205
			4500 K	206 - 210
			5000 K	211 - 215
			5500 K	216 - 220
			6000 K	221 - 225
			6500 K	226 - 230
			7000 K	231 - 235
7500 K	236 - 240			
8000 K	241 - 255			
15	20	Moving Color	No Function	0 - 49
			Skip Change	50 - 99
			Gradual Change	100 - 255
16	21	Moving Color Speed	From Fast to Slow	0 - 255
17	22	Reset	No Function	0 - 250
			Reset	251 - 255

